

## PREPERATION NOTES

# JUBU Syvecs TeamViewer remote maintenance

Please follow the instructions in this manual for a proper preparation of the JUBU Syvecs TeamViewer remote maintenance.

Please find in this document:

1. NECESSARY HARDWARE
2. NECESSARY SOFTWARE
3. PREPARATIONS

## 1. NECESSARY HARDWARE

| # | ITEM   | ART-NO. | UNITS |
|---|--|---------|-------|
| 1 | Notebook (Windows) with stable internet connection                   | -       | 1     |
| 2 | Notebook charger   | -       | 1     |
| 3 | LAN-cable (Ethernet-cable)   | -       | 1     |
| 4 | 12V Car battery charger (for longer sessions or low battery voltage) | -       | 1     |



Fig 1: Syvecs ECU

## 2. NECESSARY SOFTWARE

1. Download and install TeamViewer on your notebook (1). The free version works fine.

<https://www.teamviewer.com/de/download/free-download-with-license-options/>

2. Download and install Syvecs configuration and mapping software.

<https://www.syvecs.co.uk/forum/viewtopic.php?f=8&t=122&sid=ea2174f4b529c46b7779b5a0862148f7>



**ATTENTION!** Please download the latest version which is found on the bottom of the page.

## 3. PREPARATIONS

1. Remove the engine bay covers on the left side (gearbox side) to get access to the Syvecs ECU.
2. Connect the notebook (1) to the SYVECS-ECU using the LAN-cable (3) and the LAN-socket. The LAN-socket is found on a cable that is plugged into the ECU. *Fig 2* and *Fig 3* will help you find the location.



**NOTE:** Please connect your notebook to the notebook charger (2).




*Fig 2: The LAN-socket (connected to the ECU via cable) is located in the yellow marked region.*



*Fig 3: Connect your LAN-cable (3) to the LAN-socket.*

3. If your car battery voltage is bad or a longer maintenance session is expected, please connect your car to a 12V battery charger (4).
4. Turn the ignition on by pressing the START button for 10-15 seconds. Then "ignition on" will appear on your display.
5. Open TeamViewer.
6. Connect to the JUBU Software Engineer (René) via TeamViewer.

 **NOTE:** You will get the TeamViewer ID and password via email at [r.rosinger@jubu-performance.com](mailto:r.rosinger@jubu-performance.com) or via WhatsApp +43 664 466 69 36.

**The preparations are finished. Now please follow the instructions in the TeamViewer chat!**

\*\*\*\*\*

If you have any questions or need additional information, please contact us by email:

[info@jubu-performance.com](mailto:info@jubu-performance.com)

**JUBU Performance GmbH**

Saxenegg 3a, 4323 Münzbach, AUSTRIA