

ASSEMBLY & INSTALLATION NOTES

JUBU Carbon diffuser fins (JU00115PRD)

for Emira

Please follow the instructions in this manual for a proper assembly & installation of the JUBU Carbon diffuser fins for Emira.

Please find in this document:

1. PART LIST
2. ASSEMBLY & INSTALLATION NOTES

1. PART LIST for product JU00115PRD

#	ITEM	ART-NO.	UNITS
1	Carbon diffuser fin center right	JU00496ART	1
2	Carbon diffuser fin center left	JU00497ART	1
3	Carbon diffuser fin outer right	JU00498ART	1
4	Carbon diffuser fin outer left	JU00499ART	1
5	Bodywork adhesive	-	1

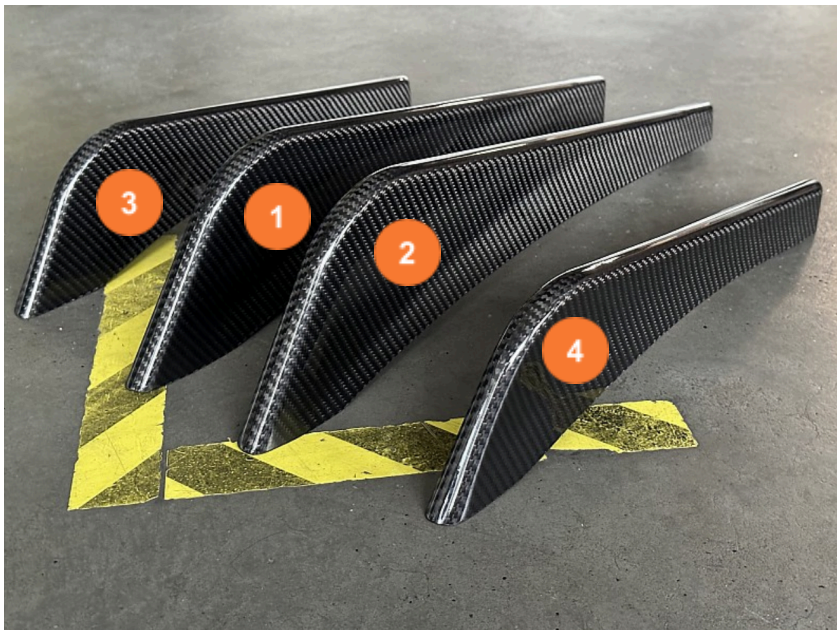


Fig 1: Scope of delivery

2. ASSEMBLY & INSTALLATION NOTES

1. Clean and degrease the surface where the diffuser fins will be placed.
2. Add bodywork adhesive (5) on the inside of the diffuser fins (1 & 2 & 3 & 4) as shown in Fig 2.



Fig 2: Adding bodywork adhesive on the diffuser fins.

3. Glue the carbon diffuser fins (1 & 2 & 3 & 4) on the OEM diffuser as shown in Fig 3.

⚠ NOTE: The bodywork adhesive needs at least 90 minutes curing time.

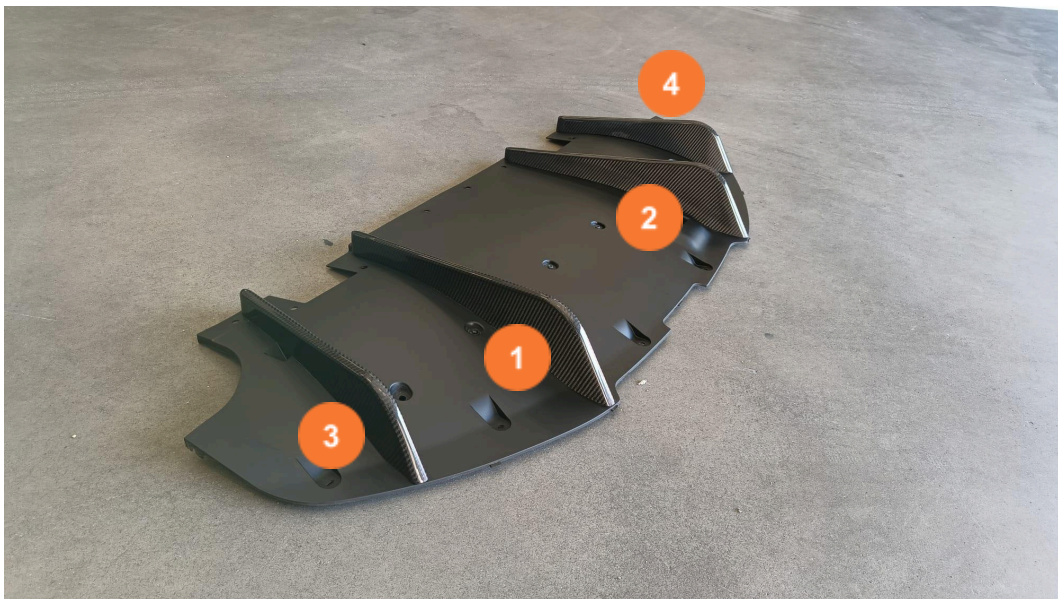


Fig 3: JUBU carbon diffuser fins.

If you have any questions or need additional information, please contact us by email:

info@jubu-performance.com

JUBU Performance GmbH

Saxenegg 3a, 4323 Münzbach, AUSTRIA